

European Mode Features (Valentine One version 3.864 and higher)

The "Euro" mode will configure the Valentine One to concentrate it's operation on the radar bands that are popular in most European countries.

Radar Coverage

- Ka Photo Radar band
- Ku Radar band (see "Euro Mode User Programming Features" below) 
- X Radar band (see "Euro Mode User Programming Features" below) 
- K Radar band (see "Euro Mode Control" below)  and 
- Ka Pop band (see "Euro mode User Programming Features" below) 
- K Pop band (see "Euro Mode Control" below)  and 

Enabling "Euro" mode

The "Euro" mode can be enabled by entering User Programming and changing the "u" feature to Rear Arrow(see below). The user will see "E" "u" "r" sequence in the power-up sequence when "Euro" mode is enabled.

K False Suppression

To enable the "K false pre-mute", the user must program the "7", "b", "C", "d", "E", "F" and "G" as in USA mode.

Euro Mode User Programming features (changed through user programming):

	"Euro" mode disabled (factory setting)
	"Euro" mode enabled
	"Euro" mode X band disabled (factory setting)
	"Euro" mode X band enabled
	"Pop" enabled (factory setting)
	"Pop" mode disabled
	K false pre-mute disabled (disables features "b", "C", "d", "E", "F" and "G") (factory setting)
	K false pre-mute enabled (enables features "b", "C", "d", "E", "F" and "G")
	Ku Band disabled (factory setting)
	Ku Band enabled

Euro Mode Control (changed with "Mute/Mode" push button press):

Euro Mode Control is displayed in the "Count/Mode" front panel indicator during normal Valentine One operation and can be changed by pressing the "Mute/Mode" push button.

	"Euro" mode with K band and Ka Photo band enabled (factory setting)
	"Euro" mode with K band disabled

